

HB 02 LEVEL INDICATOR

TECHNICAL DATA

HB 02 level indicators are directly connected to the reservoir to check the level of the hydraulic fluid. The body is made of aluminum and provides a see-thru tag made of polyamide resin. They are available with GAS threads from G1/4" to G1"1/4 and are supplied with the necessary bonded seal washer.

- Aluminum body
- Maximum working pressure 145 psi (10 bar)
- High resistance to weather conditions

| MATERIALS | |
|-----------------|------------------|
| Body | Aluminum |
| Тад | Polyamide |
| Contrast screen | Painted aluminum |
| | |

| FLUIDS COMPATIBILITY According to ISO 2943 (Norm ISO 6743/4) | | | | | |
|-----------------------------------------------------------------|-----------------------------|--|--|--|--|
| Mineral oils | HH - HL - HM - HR - HV - HG | | | | |
| Water emulsions | HFAE - HFAS | | | | |
| Synthetic fluids | HS - HFDR - HFDU - HFDS | | | | |
| | | | | | |

PRESSURE

Maximum working pressure 145 psi (10 bar)

WORKING TEMPERATURE


-22 \div 195 °F (-30 \div 90 °C)


002



HB 02

DIMENSIONS

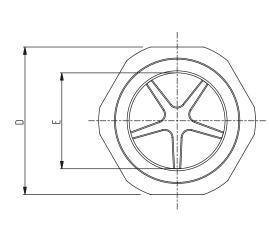

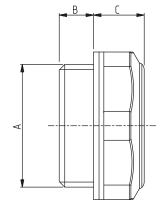

| Indicator type | Weight | Α | В | С | D | E | Tightening torque |
|----------------|------------------|----------|------------------|------------------|----------------|----------------|----------------------|
| | Kg(lbs) | GAS-BSPP | mm(in) | mm(in) | mm(in) | mm(in) | Nm(lbf in) |
| HB 02-GB | 0,006 (0.013) | G 1/4 | 6 (0.2362) | 11 (0.4331) | 18 (0.7087) | 11 (0.4331) | 15 (133) |
| HB 02-GC | 0,010 (0.022) | G 3/8 | 7,5 (0.2953) | 11,5 (0.4528) | 22 (0.8661) | 13 (0.5118) | 15 (133) |
| HB 02-GD | 0,013 (0.029) | G 1/2 | 7,5 (0.2953) | 11,5 (0.4528) | 27 (1.0630) | 16 (0.6299) | 20 (177) |
| HB 02-GE | 0,020 (0.044) | G 3/4 | 10,5 (0.4134) | 10,5 (0.4134) | 32 (1.2598) | 20 (0.7874) | 30 (265) |
| HB 02-GF | 0,032 (0.070) | G 1 | 9,5 (0.3740) | 12,5 (0.4921) | 40 (1.5748) | 26 (1.0236) | 50 (442) |
| HB 02-GG | 0,054 (0.119) | G 1 1/4 | 10,5 (0.4134) | 15,5 (0.6102) | 50 (1.9685) | 34 (1.3386) | 60 (531) |


ASSEMBLY INSTRUCTIONS

HB 02 level indicators get connected to the tank by screwing them to a seat with an orthogonal surface. Before connecting make sure there are no burrs in the mounting threaded seats. Use the tightening torques suggested by the table above.

01/09.2011

NOTE

To avoid accidental impacts that might break the level indicator and cause oil leaks, we suggest to arrange additional protection of the tank.

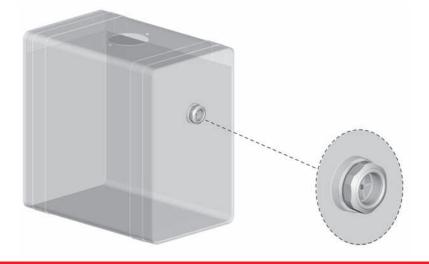



HOW TO ORDER AN HB 02 LEVEL INDICATOR



| 1 | Level indicator type | CODE | | |
|---|----------------------|-------|--|--|
| | See table on page 5 | HB 02 | | |
| 2 | Connection thread | CODE | | |
| | G 1/4 | GB | | |
| | G 3/8 | GC | | |
| | G 1/2 | GD | | |
| | G 3/4 | GE | | |
| | G 1 | GF | | |
| | G 1 1/4 | GG | | |

